



BAXTER CONTROLS, Inc.

P.O. Box 225 Driftwood, Tx. 78619

512-858-5058

The Pocket Console[®] DMX

www.thepocketconsole.com

dmXact[™]

Software Upgrade

Operation

1) Switch unit to NORMAL mode. The LED Patch display will go dark with two faint dots displayed. This is to save battery life. These will glow to indicate battery life "good." (If these lights are blinking, time for a new battery. If out, battery is dead.)

2) Now, Touch the NEXT button. A "d" will be displayed in the left LED window of the LED. Now, move a slider...watch what happens...

This "d" stands for DMX value. The readout will give you output display from 0-255 in TRUE dmx value. It will fade away after a few seconds...enough time to read the display, but not enough time to drain the battery.

3) Now, Touch the NEXT button again. A "P" will be displayed in the center LED window. Now, move a slider...see the new level display of dmx % of 0-100%.

4) Now, Touch the NEXT button again. An "H" will appear...in the right LED window. This stands for binHex. Move a slider and you will see the alphanumeric code displayed for base 16, binHex. Is this cool, or what?

5) Now, Touch the NEXT button again. The two dots reappear. Now you are in the battery saving "no display" mode.

6) Now, Touch the LAST button. Note, you are back to binHex. Hit LAST again...you are now in %...Hit LAST again...you are now back in DMX 0-255 mode.

That's it! This new software is a powerful tool in the right hands. Enjoy!

www.thepocketconsole.com